

HP CD-Writer Program User Guide

- -

Version 1.0

CD

가

, CD

CD

HP

CD-RW TEAM


2000 4

< >

1.	CD	3
	<1> Easy CD Creator	CD5
	<2 > Direct CD	9
2.	CD	12

1. CD

CD CD CD 가 .
 []-[HP CD Writer Plus] 'Create a CD' .

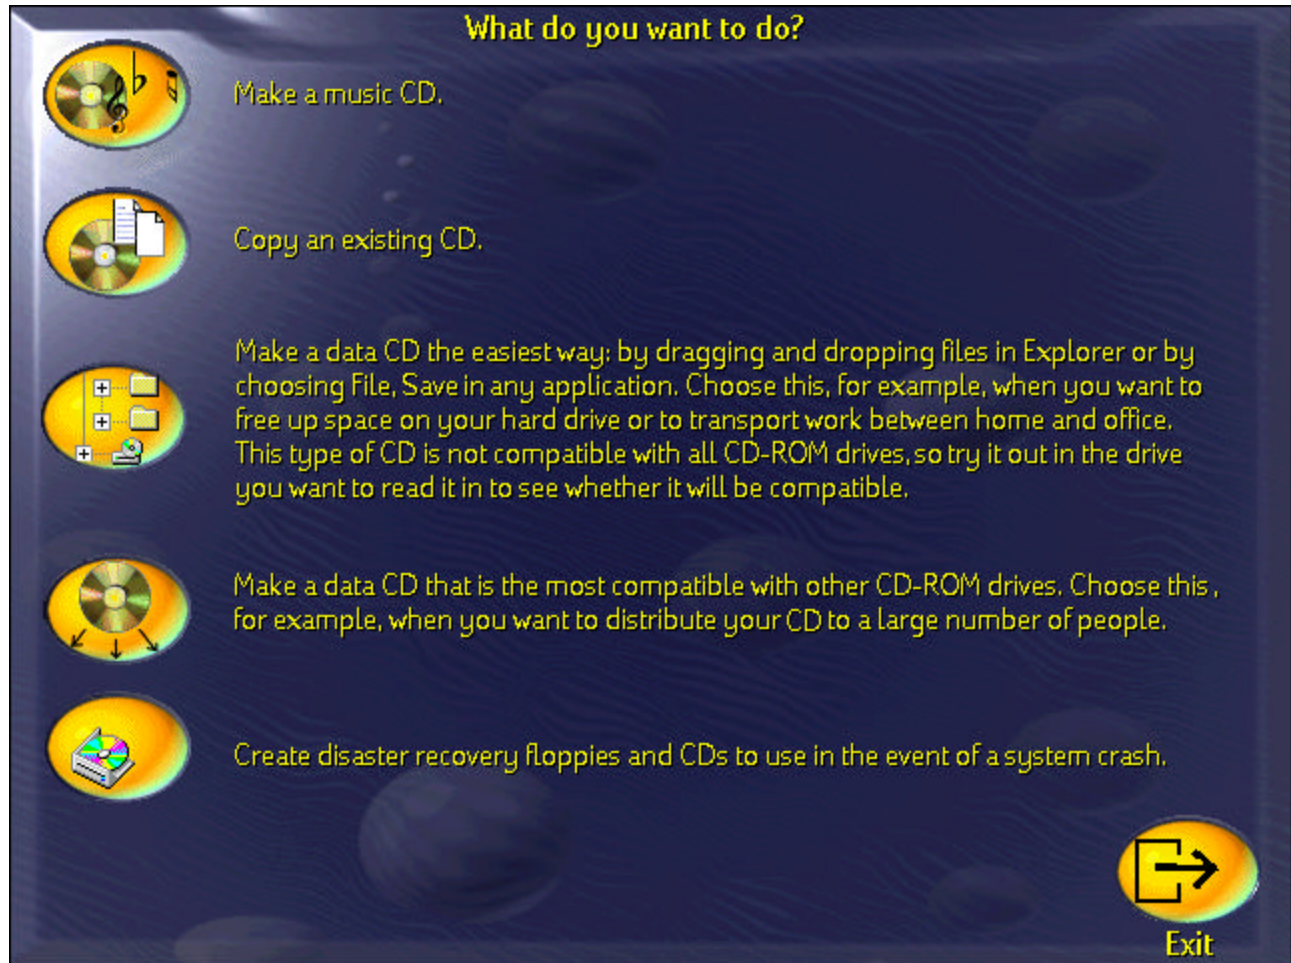


[Create a CD]

, CD (Easy CD Creator)
 , CD (CD Copier)
 , CD (Direct CD)
 , CD (Easy CD Creator)
 , (Disaster Recovery)

Blank CD-R(CD) CD-Writer

CD-R

'Create a CD'

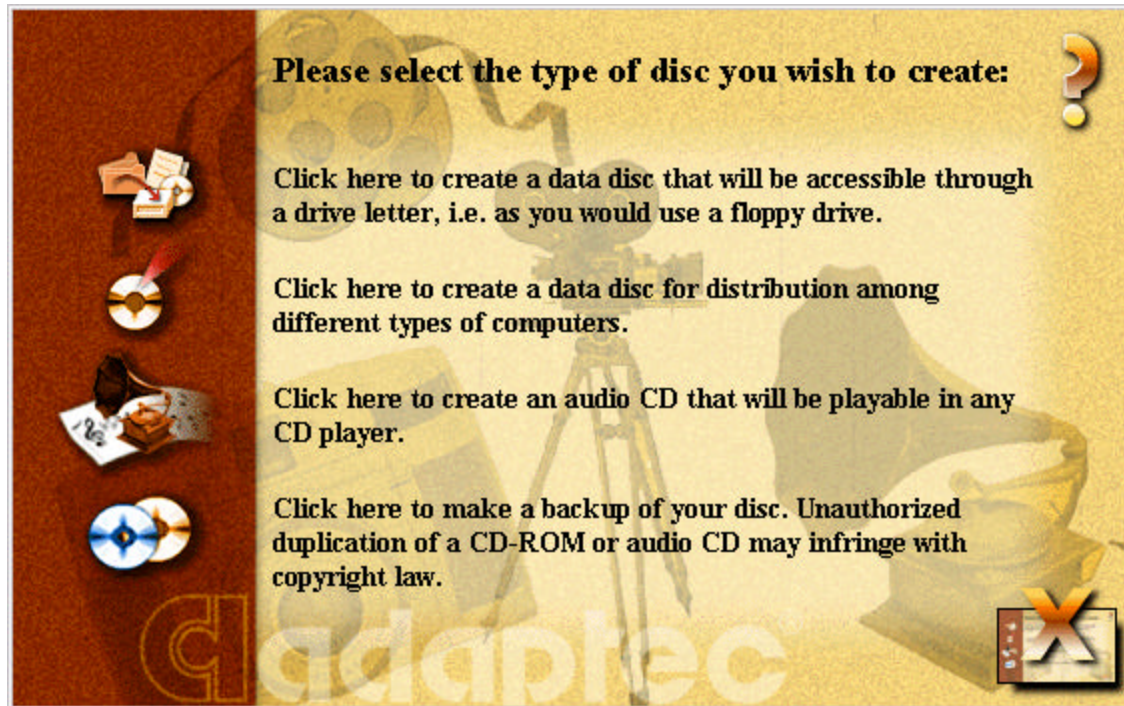

가

[]-

]-[HP CD Writer Plus]

'Create a CD'

, Direct CD (CD)

, Easy CD Creator for Data Copy (CD CD)

, Easy CD Creator for Audio Copy (CD CD)

, CD Copier (CD)

<1> Easy CD Creator

CD


3 4 CD (Easy CD Creator)

Wizard()가


(1) 'Data CD'가 (N)




(2) , 'Add Now'

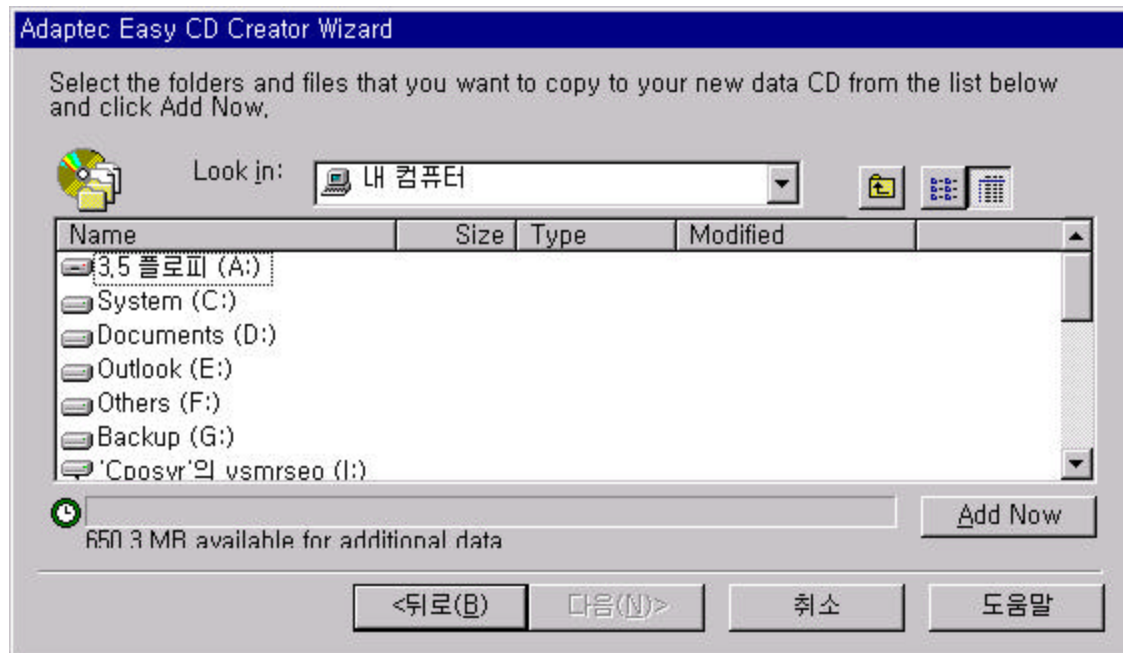


(3) 'Add Now' 가 ,
440Mb 가

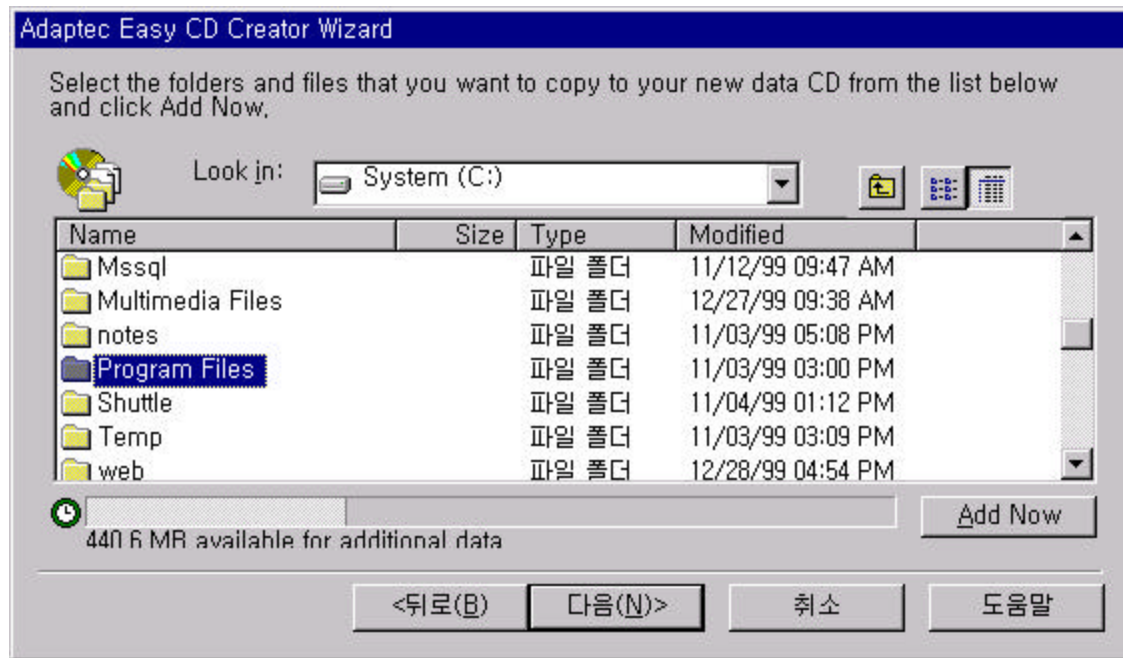

/ 가 ' (N)'

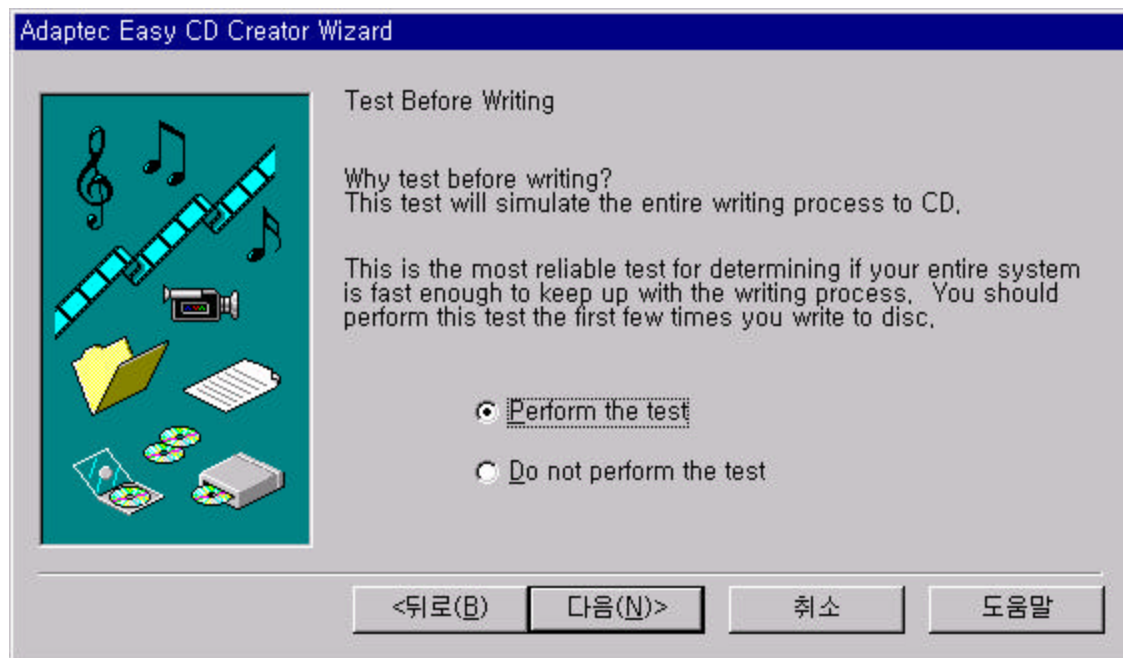

(4) Test 가 , 'Do not perform the test'
' (N)' 'Perform the test' ' (N)'
() 가

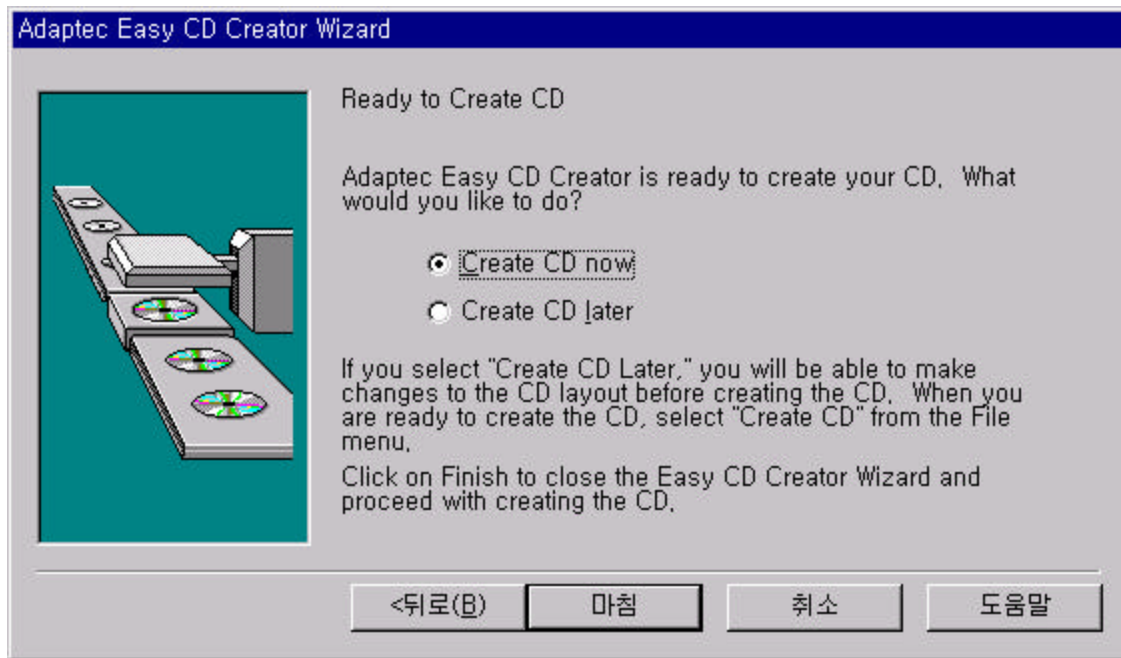


(5)

Easy CD Creator

, 'Create CD now'

'Create CD later'

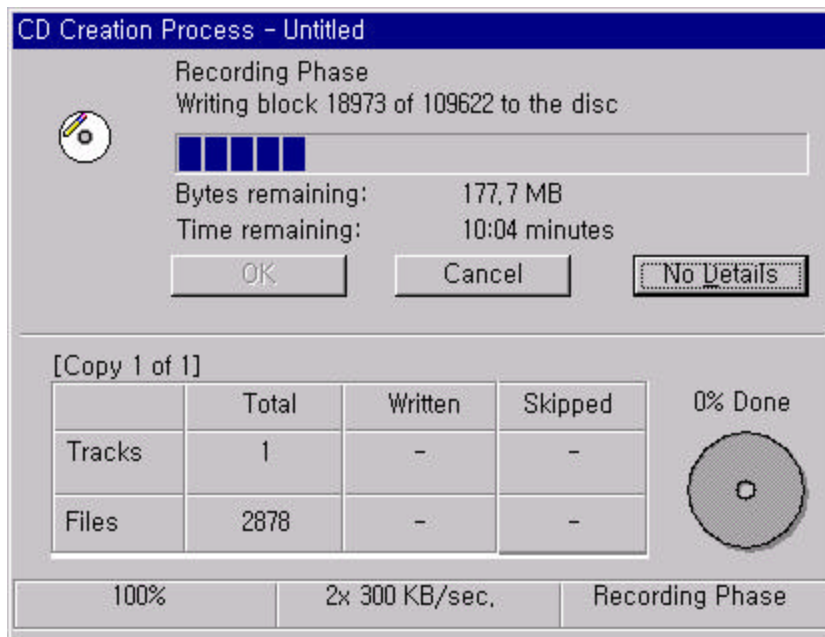

(6)

가 2x 300KB/sec

, Buffer Level 100%

(Wizard)

2

CD-RW가

, 'HP CD-Writer Program User Guide

()'

(7)

V


X

'Cancel'

'View Errors'

'View Errors'

가

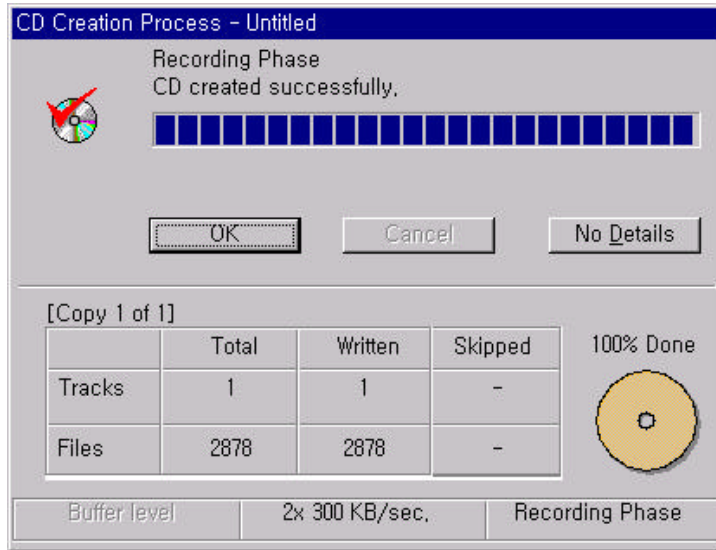

Easy CD Creator

(Wizard)

CD

가

<2> Direct CD

Direct CD

CD-R, CD-RW Media

, Direct CD

(1) 'Create a CD'

Direct CD



(2) CD-Writer CD , 'Next'




'Media Status:'

'Blank CD-R disc. This disc can be formatted to DirectCD for read and write access.'


(3) CD가 CD-R 가

'Next'

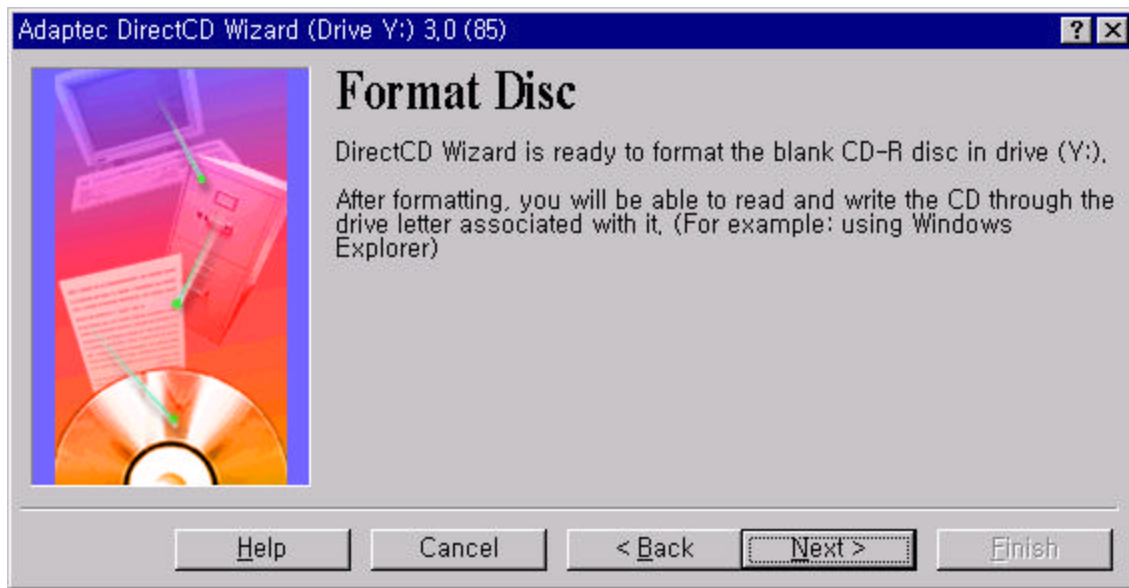

(4) CD (CD) , 11 가

'Finish'

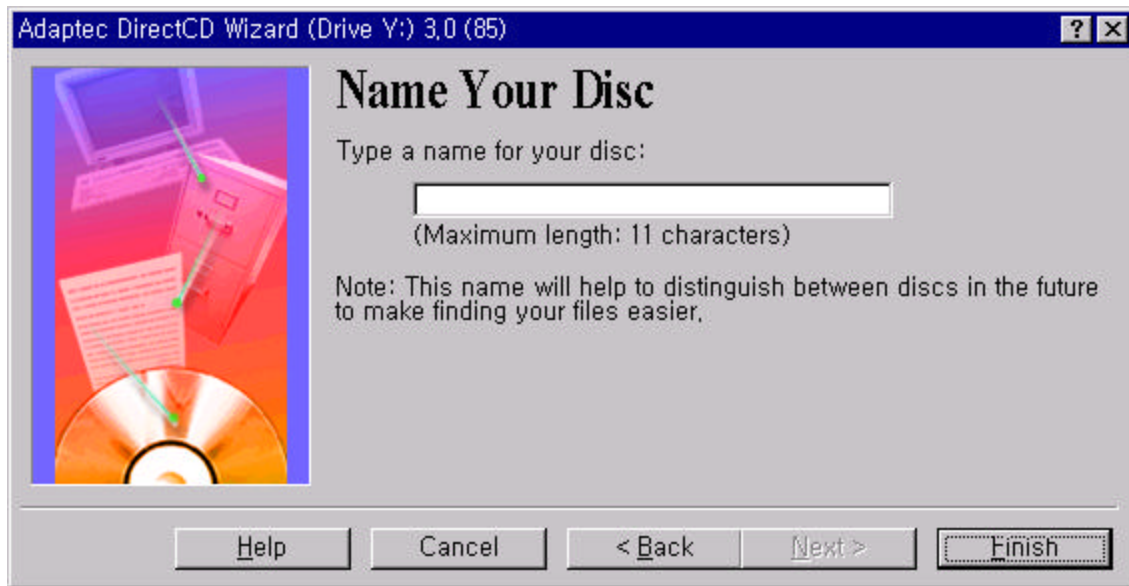

(5) CD

(6)

CD-R

CD-RW

, 2가

CD-ROM

CD-R

'Leave the disc as it is...'

, 'Finish'

CD-R

CD-ROM


CD-ROM

CD-R

CD-R

'Organize the disc...'

, 'Finish'

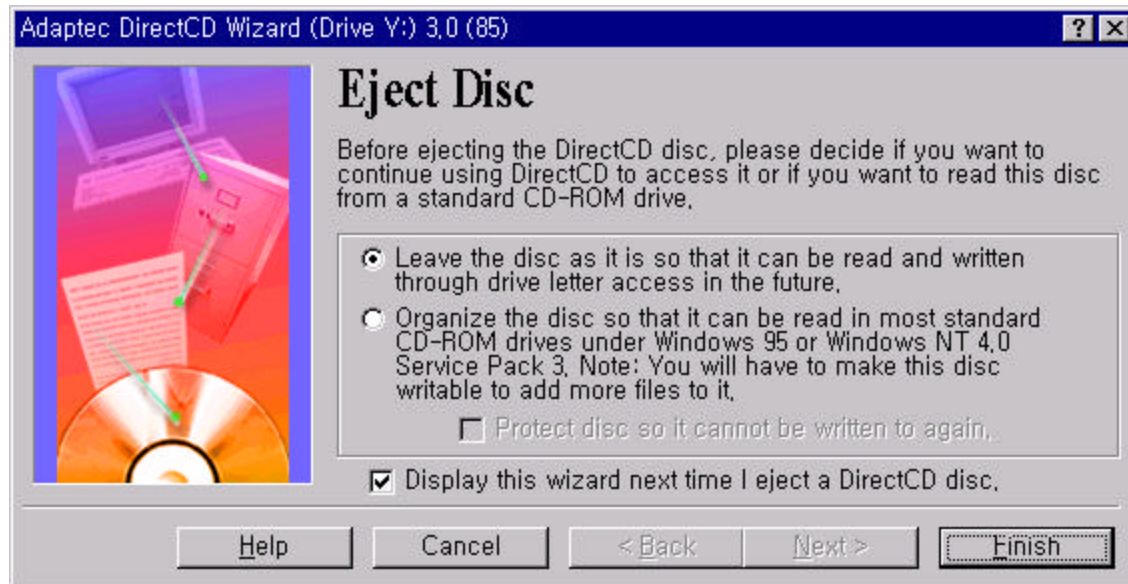

CD-RW

2. CD

CD


CD

CD

(1) CD (Wizard) 'Audio CD'



(2) 'Add Now'

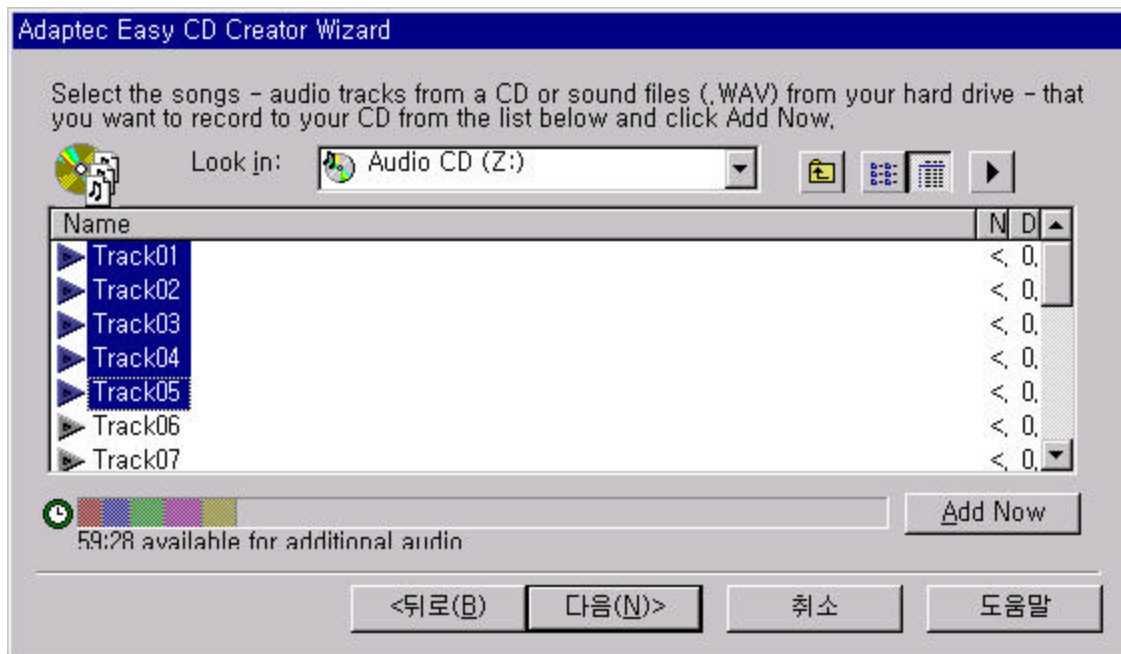

(3) Disc Title() Artist name(가) (N)



(4) CD



가

Close the session

CD-ROM Drive ,

가

CD


Close the Session

가 , CD 가 CD
 가 CD , CD
 Close the session
 CD Session CD
 CD CD 74

(5)

'Do not perform the test'

(N)

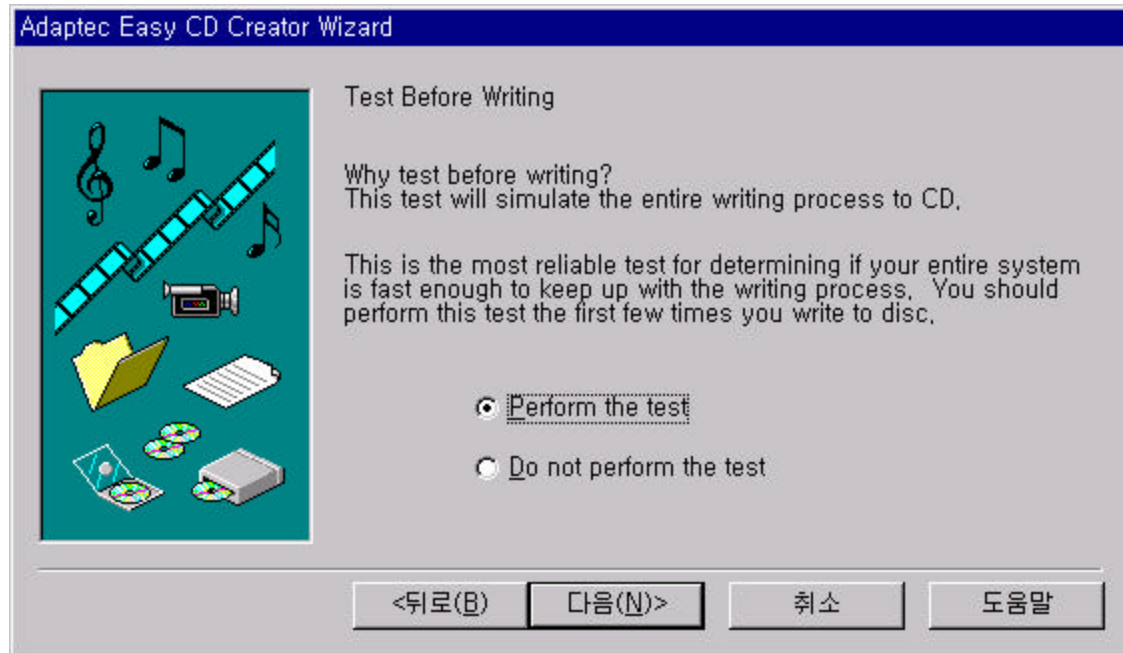

(6)

CD

'Create CD now'

